




25-A Shawnee Way • Bozeman, Montana 59715
 (406) 586-9393 • Fax (406) 585-7378 • 800-805-8716

WEAPON RELEASE TIMER MODEL RC-15-AL

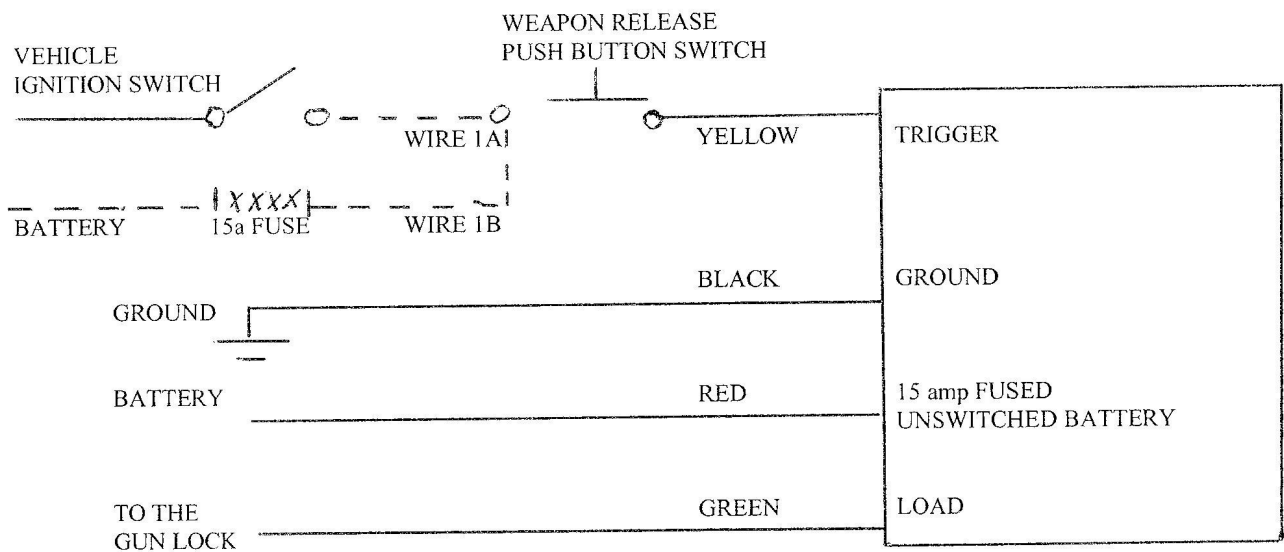

OPTION 1A (IGNITION CONTROLLED GUN RELEASE)
 (IGNITION MUST BE ON)

OPTION 1B (IGNITION HAS NO CONTROL)

1A. Connect wire 1A between the ON side of the ignition switch and the weapon release push button switch.

1B. Connect wire 1B between the 15 amp fused unswitched battery and the weapon release push button switch.

2. Connect the timer yellow (trigger) wire to the weapon release push button switch.
3. Connect the timer black (ground) wire to the vehicle chassis. (a metal ground.)
4. Connect the timer red wire to a 15 amp fused unswitched battery supply.
5. Connect the timer green wire to one of the wires on the gun lock.
6. Connect the second wire coming out of the gun lock head to a metal ground.

NOTE: Repeated continuous use of lock without giving sufficient time to cool down, will cause failure of the release until the solenoid cools. This is a physical limitation of the coil and not a defect of the system.